

INSTRUCTION MANUAL

BIKEPRO 4-IN-1 BIKE LIGHT

PACKAGE CONTENTS

- 4-in-1 bike light
- Micro USB cable
- Bike mount base
- Horn

TECHNICAL SPECIFICATIONS

- Lamps: 2 × XM-L T6 fluorescent bulbs
- Brightness: 400 lm
- Strong / weak / flashing light modes
- Horn sound volume: 130 dB
- Battery capacity: 4000 mAh lithium-ion battery
- Charging time: 5 h
- Output current: 0,8 A
- Material: ABS, PS, silica gel
- Size: 11,5 × 5,5 × 5 cm
- Waterproof rating: IPX-3



COMPONENTS



- (1) Phone holder clip
- (2) Bike mount quick release
- (3) LED lights
- (4) Horn speaker
- (5) Bike mount base
- (6) Horn button (with rubber fastening belt)
- (7) Power output USB port
- (8) Charging micro USB port
- (9) Light mode / on-off button

INSTALLATION

- First, unscrew the bike mount base's tightening screw and decide where you want to put the 4-in-1 bike light.



- Place the mount wherever on the handlebar (make sure that the non-slip spacers are inserted into the mount) and tighten the tightening screw.
- Slide the 4-in-1 bike light into the base and enjoy the product.
- To remove the bike light press on the bike mount quick release and slide the light off.
- The horn button should also be fastened to the handlebar with the rubber belt that is part of the horn.
- The product battery is already partially charged when it arrives, but it is highly advisable that you leave it charging for 5 h before first use.

FEATURES AND HOW TO USE THEM

○ BIKE LIGHT

- There are three different light modes: Bright light, low light, and flashing light.
- Press the white button (no. 9) once to turn on the bright light.
- If you press the button again, it will switch to low light.
- Pressing the button yet again will switch it to the flashing light mode.
- Press the button again to turn the light off.
- In short, pressing the white button cycles the different light modes.

○ PHONE HOLDER

- The phone holder is the top-most part of the BikePro 4-in-1 bike light (no. 1).
- Slide the phone in and ride your bike with no worries that the phone would fall out.
- It can hold phones of all sizes from 4" (10,2 cm) to 6.3" (16 cm).

○ HORN

- The horn speaker is on the bottom side of the product (no. 4).
- Sound the horn by pressing the horn button (no. 6).
- There are 5 different horn sounds available.
- To change the sound of the horn press and hold the horn button for four seconds.
- Fasten the horn button to the handlebar of your bike with the rubber fastening belt

○ POWER-BANK

- The product features a 4000 mAh power-bank battery.
- The USB and the micro USB ports are under the power button, behind a rubber seal.
- To charge the power-bank, connect it (no. 8) to a charger with the included micro USB cable.
- To charge your phone with the power-bank, plug a charging cable into the power-bank (no. 7) and the phone will start charging automatically.
- If the battery capacity of the power-bank is below 30%, it will not charge your phone, but rather conserve the energy for other operations.


IMPORTANT

- Pay attention to the road when using this item on a bike.
- Always turn on the light when using the product on a bike at night.
- Waterproofing is sufficient for rainy conditions. Do not fully submerge into water.
- Check the tightening screw before use to make sure the product is securely fastened to your bike.
- Slide the product all the way back on the bike mount until it clicks to make sure it is securely fastened to your bike.

- Do not use your phone during cycling to avoid accidents.
- Only use the included USB cable to charge the power-bank for best performance and to avoid damage.
- Improper use will void the warranty.
- This device has no user serviceable components. Do not disassemble.
- Turn off when not in use.

WARRANTY

The warranty is valid for 24 months. You can claim it from DFVU d.o.o., Liparjeva 6a, 1234 Mengeš, Slovenia, for a replacement product or a refund. Send us your order number and purchase date in the email, which is available by clicking on our logo in the bottom right corner. The product has a lifetime of 24 months from the date of collection.

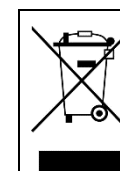

WEEE disposal and recycling symbol. The WEEE symbol is attached to the product in compliance with the EU directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). It is intended to deter the improper disposal of this product and to promote reuse and recycling.