

INSTRUCTIONS

PLANE LAUNCHER TOY GUN AEROSHOOT

PACKAGE CONTENTS

- Launcher
- 4 × toy airplane

TECHNICAL SPECIFICATIONS

- Material: ABS
- Launcher size: 8 × 15 × 25 cm
- Plane size: 9.5 × 14.5 cm



COMPONENTS



- (1) Trigger
- (2) Handle
- (3) Loading button
- (4) Magazine

HOW TO USE

- Pull the magazine up as far as it goes and load the planes into it, like shown in the picture below.



- Up to three planes can be loaded into the magazine.
- Aim the launcher and pull back the handle to ready it.
- Pull the trigger and the plane will fly off through the air.
- Press the loading button to get the next plane ready for take-off.
- Repeat the previous steps and have fun.

WARNINGS

- Do not aim at other people. The planes can cause injury to the face or eyes.
- Only use the product for its intended purpose.
- Do not disassemble or modify in any way.
- Keep away from heat and moisture.
- Not suitable for children younger than 3 years. Contains small parts.

WARRANTY

The warranty is valid for 24 months. You can claim it from DFVU d.o.o., Liparjeva 6a, 1234 Mengeš, Slovenia, for a replacement product or a refund. Send us your order number and purchase date in the email, which is available by clicking on our logo in the bottom right corner. The product has a lifetime of 24 months from the date of collection.





WEEE disposal and recycling symbol.
The WEEE symbol is attached to the product in compliance with the EU directive *2012/19/EU* on Waste Electrical and Electronic Equipment (WEEE). It is intended to deter the improper disposal of this product and to promote reuse and recycling.