INSTRUCTIONS

PLASTIC WELDING GUN STAPLEMASTER

PACKAGE CONTENTS

- Storage box
- Plastic welding gun
- Knife
- Pliers
- 4 × 50 staples


TECHNICAL SPECIFICATIONS

- Size: 225 × 155 mm
- Staple material: stainless steel
- Rated voltage: AC 220 V
- Output voltage: 0–3 V
- Rated power: 50 W
- Welding gun weight: 490 g



HOW TO USE

- Read this user manual in its entirety before using the product.
- The StapleMaster plastic welding gun is used to repair cracks in hard and thick plastic (thicker than 1.5 mm).
- Find the spot you wish to weld together and clean it.
- Identify what type of area is it. There are four different staples included in the package for different surfaces.
 See the picture below:

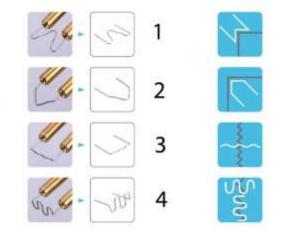

- 1. This type of staple is used for repairing outer corners.
- 2. This type of staple is used for repairing inner corners.
- 3. This type of staple is used to repair thin cracks.

- 4. This type of staple is used to repair wide and complex cracks.
- After you have chosen the most suitable staple for your repair, take the welding gun out of the box and plug it into an electrical outlet.
- Place the staple into the metal rods on the gun as shown in the previous picture.
- Press and hold the trigger on the welding gun. This will heat the staple and make it glow red. The handy light on the gun will also illuminate the area you want to staple.
- Push the staple into the plastic and twist it a bit so that it can't be pulled out easily. Make sure that the piece you are repairing is held by a vice or similar tool – do not hold it in your hands while you work.
- Stop holding the trigger and let the staple cool down a bit so that it stays inside the plastic.
- Remove the welding gun from the staple. At this point it should come off easily.
- Repeat this process as many times you need to complete your repair.
- After you're done welding, unplug the welding gun and let it cool down before storing it in the box.
- Take the included pliers and cut off any parts of the staples that are still sticking out of the plastic. We also recommend sanding the remains with sandpaper or a file for a smooth finish.



WARNINGS

- Wear safety gloves and goggles when using the tool.
- Make sure your work area is well lit and clean when using the product.
- Store out of children's reach.
- Do not modify the tool in any way.
- Do not touch the staples when the welding gun is working to prevent serious burns.
- Always wait for the welding gun to cool down before storing in the box.
- Do not under any circumstance use the gun on humans or animals.
- Do not use around flammable gasses and other substances.
- Do not use the product if it's damaged in any way.

WARRANTY

The warranty is valid for 24 months. You can claim it from DFVU d.o.o., Liparjeva 6a, 1234 Mengeš, Slovenia, for a replacement product or a refund. Send us your order number and purchase date in the email, which is available by clicking on our logo in the bottom right corner. The product has a lifetime of 24 months from the date of collection.



