

## INSTRUCTIONS

### MULTIFUNCTIONAL ALARM CLOCK SNOOZER

#### PACKAGE CONTENTS


- Alarm clock
- Micro-USB charging cable
- Instructions

#### TECHNICAL SPECIFICATIONS

- Size: 4,5 × 13,9 × 6,8 cm
- Material: ABS
- Power supply: 1200 mAh 3,7 V rechargeable battery
- Bluetooth version: 5.0
- Max Bluetooth range: 10 m
- Speaker power: 5 W
- Max TF card size: 32 GB (not included)



#### COMPONENTS

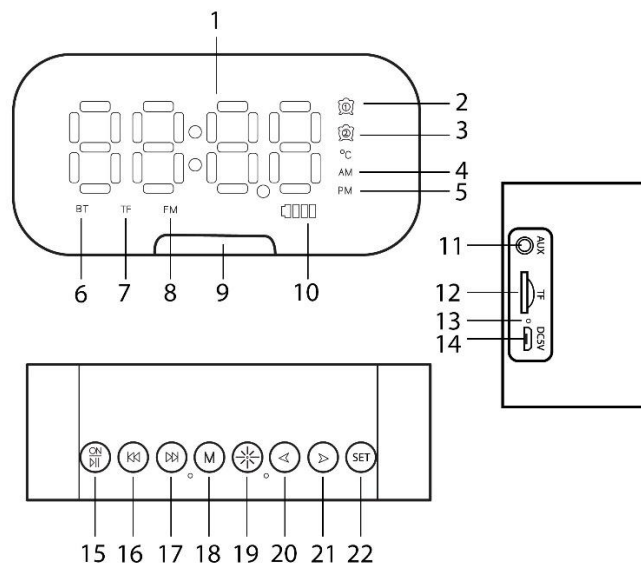

1. LED display
2. Alarm 1
3. Alarm 2
4. AM – morning
5. PM – afternoon
6. Bluetooth mode
7. TF card mode
8. FM radio mode
9. Phone holder
10. Battery display
11. AUX port
12. TF card slot
13. Charging indicator
14. Charging port
15. ON/OFF, play/pause
16. Previous song/volume down
17. Next song/volume up
18. Mode selection
19. Brightness

20. Decrease time
21. Increase time
22. Set

#### HOW TO USE

##### Charging

- When the battery is low, the device will play a “battery low” sound and power off automatically.
- Insert one end of the included charging cable into the charging port on the alarm clock. Insert the other end of the cable into any USB port on your computer or phone charger. The device will start charging.
- It usually takes 4 h to fully charge the device. Playing music at maximum volume, the battery lasts 6 h. At medium volume, it lasts about 16 h. In clock-only mode, the battery lasts up to 48 h.

##### Bluetooth

- Turn on the power by pressing and holding the ON/OFF button. The device will power on in Bluetooth pairing mode. Turn on your phone’s Bluetooth function and find the device in the settings then connect to it (the device is called Q5). A sound will alert you that the device is connected to Bluetooth. You can now play media from your phone through the device’s speaker.
- To disconnect Bluetooth and connect another device, forget this device in your phone’s Bluetooth settings and follow the steps above for the new device.

### TF Card

- Insert the TF card into the corresponding slot on the side of the device. Maximum supported size is 32 GB. Press the M button (18) to switch to TF mode. The music from your TF card should begin playing automatically (only mp3 format supported).

### Media control

- Press the play/pause button to play or pause media. Press the next song or previous song buttons to navigate songs. Press and hold the volume up/down button to increase or decrease volume.

### Radio

- Insert the charging cable to act as an antenna. Then press the M button (18) to switch to FM mode. The radio might take a minute to find stations, but when it does, music will start playing and you can navigate the stations with the next and previous song buttons. You can adjust the volume normally.

### Setting the time and alarms

- Power on the device then long press the SET button to set the time. The hours will start flashing. Set the hours by using the decrease time and increase time buttons. Press the SET button again to move to minutes. When you're happy with the time, long press the SET button again to save the time.
- To set the alarm, turn on the device, then click the set button until the Alarm 1/2 light turns on. Long press the SET button to

set the time of the alarm, the corresponding alarm LED will start flashing. You can do this by pressing the decrease time and increase time buttons. The process is the same as when setting the clock. When you set the hours and minutes, you can also set the ringtone of the alarm. Long press the SET button again to save your settings. You can do the same for the other alarm. After a few seconds of delay, the clock will display the current time again.

- If you want to enable or disable your set alarms, press the set button until you're happy with your selection. The alarms are active when their corresponding LED lights are turned on. You can have one of the alarms active individually or both at the same time.

### Phone stand

- You can pull out the phone stand slot using the notch on the bottom of the device (9).

### Adjusting brightness

- Press the brightness button to adjust the display's brightness. There are 4 brightness settings to choose from.

## WARNINGS


- Do not expose to water or moisture. This will damage the device.
- DO not expose to heat or open flames. This will damage the device.
- Turn the device off when not in use for a longer period of time (90 days or more).

- Always place on a flat and level surface. Failing to do so can result in falling damage to the display or the battery.
- Always charge the device when the low battery warning turns on.

## WARRANTY

The warranty is valid for 24 months. You can claim it from DFCU d.o.o., Liparjeva 6a, 1234 Mengeš, Slovenia, for a replacement product or a refund. Send us your order number and purchase date in the email, which is available by clicking on our logo in the bottom right corner. The product has a lifetime of 24 months from the date of collection.

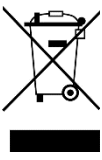

	<p>WEEE disposal and recycling symbol. The WEEE symbol is attached to the product in compliance with the EU directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). It is intended to deter the improper disposal of this product and to promote reuse and recycling.</p>
---	---