

## INSTRUCTIONS

### OUTDOOR LED PROJECTOR HOLIDAYRHAPSODY

#### PACKAGE CONTENTS

- LED projector with cable
- USB adapter
- Plastic stake
- Plastic base
- 12 slides

#### TECHNICAL SPECIFICATIONS

- Rated power: 7.5 W
- Rated voltage: 5 V
- Power connector: USB cable
- Material: ABS
- Size: 16 × 20 × 23 cm



#### COMPONENTS



- (1) Slide handle
- (2) Slide
- (3) Motor ON/OFF switch
- (4) Light ON/OFF switch
- (5) LED projector
- (6) Plastic stake
- (7) Tightening knob
- (8) Plastic base
- (9) USB adapter

#### HOW TO INSTALL & USE

- First, select the location for the HolidayRhapsody LED projector. Keep in mind that there should be no visual obstructions between the projector and the surface where the projection will show.
- Decide whether you want to use the plastic stake or the base to ensure the projector's maximum stability.
- If the ground is soft, we recommend you use the stake, and if the ground is solid and flat, we recommend you use the plastic base.
- If you are using the plastic base, simply push the bottom part of the projector into the hole in the center of the base. If you are using the plastic stake, push the bottom part of the projector into the hole on top of the stake.
- Set the projector where you want it to be and loosen the tightening knob to adjust the angle. Make sure your projector is pointing directly to the surface where you want the projection to show. Tighten the knob to secure the position.
- Connect the cable of the projector with the included USB adapter and plug it into a wall socket or a power extension cable.
- Choose one of 12 different slides and carefully clip it into the slide handle.
- Insert the slide handle with the slide into the slot on the side of the projector.

- Push the light ON/OFF switch (4) to turn the light of the projector on. The projection should now become visible.
- To turn on the rotation of the projecting images, push the motor ON/OFF switch (3).
- To turn off the device, simply push both ON/OFF switches again.


## WARNINGS

- Do not submerge the product in water.
- Never plug or unplug the device with wet hands.
- Do not operate the projector with a damaged cable or adapter.
- Do not intentionally shine into the eyes or face.
- Do not attempt to open the housing or replace the lamp of the device.
- Always unplug the unit during a thunderstorm or when not in use.
- Only use the included USB adapter.
- Do not disassemble or modify in any way.
- Keep away from children and pets.

## WARRANTY

The warranty is valid for 24 months. You can claim it from DFVU d.o.o., Liparjeva 6a, 1234 Mengeš, Slovenia, for a replacement product or a refund. Send us your order number and purchase date in the email, which is available by clicking on our logo in the bottom right corner. The product has a lifetime of 24 months from the date of collection.



	<p>WEEE disposal and recycling symbol. The WEEE symbol is attached to the product in compliance with the EU directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). It is intended to deter the improper disposal of this product and to promote reuse and recycling.</p>
---	---