INSTRUCTIONS

SMART TRASH BIN CLEANUP

PACKAGE CONTENTS

- Trash bin
- Trash bag holder

TECHNICAL SPECIFICATIONS

- 8 L size: 22 × 30 cm
- 15 L size: 23 × 23 × 32 cm
- Power supply: 2 × AA battery (not included)
- Material: PP, ABS
- Water resistance: IPX5
- Sensor range: 15–25 cm



HOW TO USE

Inserting the batteries

• Take the lid off and turn it around. Remove the rubber battery compartment cover and insert 2 AA batteries (not included in the package). Mind the polarity. Close the battery compartment cover again and place the lid back on the trash bin.

Turning the device on/off

 Press and hold the left button on the lid for 3 seconds to turn on the device. Press and hold for 3 seconds again to turn off.

How to use

- Wave your hand in front of the sensor. The lid will open automatically and stay open for 5 seconds if it doesn't sense movement. Hold your hand in front of the sensor to keep it open for longer.
- You can also manually open the lid by pressing the right button. The lid will stay open until you close it by pressing the same button again.

MAINTENANCE AND WARNINGS

- Remove the batteries when not in use for a long period of time or during cleaning.
- Make sure that the battery compartment stays dry during cleaning.
- If the lid opens slowly or not at all, check and replace the batteries.
- Do not expose to extreme heat or open flame.

WARRANTY

The warranty is valid for 24 months. You can claim it from DFVU d.o.o., Liparjeva 6a, 1234 Mengeš, Slovenia, for a replacement product or a refund. Send us your order number and purchase date in the email, which is available by clicking on our logo in the bottom right corner. The product has a lifetime of 24 months from the date of collection.





WEEE disposal and recycling symbol. The WEEE symbol is attached to the product in compliance with the EU directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). It is intended to deter the improper disposal of this product and to promote reuse and recycling.

