

# INSTRUCTIONS

## HAIR TRIMMER + SHAVER SET

### PACKAGE CONTENTS

- 1x Hair trimmer
- 1x Shaver
- 1x Soft pouch
- 1x AC adapter (220V)
- 2x Auxiliary Fittings
- 1x Brush
- 1x Comb
- 1x Manual
- 1x Oil for maintenance

### TECHNICAL SPECIFICATION

- Trimmer size: 185 x 45 x 40mm
- Shaver size: 155x65x56mm
- Color: silver
- Power mode: rechargeable battery, AC Power.
- Power Source: AC Power Adapter - AC220V  
Can be used in European countries mainly!
- Working Time: 5 hour charge will give 30 minutes of trimming; full charge (8-12h) will give 50 minutes of trimming.

### BEFORE FIRST USE

Before the first use, the hair trimmer must be fully charged.

1. Slide the On/Off switch downwards.

2. Insert the plug of the adapter into the power jack of the hair trimmer.
3. Plug the adapter into a power socket outlet.

The indicator light will shut off when the rechargeable battery is fully charged.



### USE

- (1) Cutting head
- (2) Detachable blade
- (3) Cutting length control wheel
- (4) On/Off switch

- (5) Indicator light/charge control
- (6) Power jack for main adapter
- (7) Retractable trimmer
- (8) Tri floating loop shaver head

### INSTRUCTIONS

#### ○ TIPS AND HINTS CONCERNING USE

The hair must be clean and dry when being cut.

Only cut small amounts.

Cut hair in progressively closer settings until you reach the desired length. The cutting head will jam if you try to work too quickly or try to cut too much hair at once. Let the appliance run for a short time before beginning.

The cutting head (operation without attachment) allows you to finely trim your beard, even in hard to reach places, and cleanly shave your hair along your temples and neck.

#### ○ GUIDE COMB

Use the guide comb to shorten hair evenly to a length of 4 – 16 mm and with other accessory from 18 – 30 mm.

To set the desired length, rotate the cutting length control wheel.

#### ○ SHAPING THE BEARD AND SHAVING THE NECK

Shaping the beard and shaving the neck are done without attachments.

1. Remove the attachment.

2. Draw the cutting head at a low angle along your skin without applying the pressure.

#### ○ **CLEANING AND CARE**

1. Remove comb attachment.
2. Press the shaving head towards the back and remove it.
3. Brush out shaving head insert (area behind the shaving head when it has been removed)
4. Reinsert the shaving head by inserting the latch of the shaving head into the groove of casing.
5. Press the shaving head back into the casing, until you hear a click.
6. Wet/dry design. For use in shower and easy cleaning.

#### ○ **OILING THE SHAVING HEAD**

Oil the shaving head from time to time if you use the trimmer regularly. Use non-corroding oil, for example sewing machine oil.

1. Remove the comb attachment.
2. Apply one to two drops of oil between the cutting teeth.
3. Turn the trimmer briefly on and then off again to distribute the oil.
4. Remove any excess oil by wiping with a cloth.

#### ○ **REPLACING THE SHAVING HEAD**

Only use original accessories. Accessories such as shaving head, adapter and comb attachments are

available at specialist shops. Never attempt to sharpen the shaving head yourself.

Change the shaving head as described in Cleaning the shaving head.

### **IMPORTANT**

#### ○ **INTENDED USE**

This hair trimmer is designed to shorten and trim hair and beards. Do not use the trimmer to cut artificial hair.

#### ○ **HAZARDS TO CHILDREN**

Keep children away from this product because they often underestimate the risks involved in handling electrical equipment. There is considerable danger of cutting yourself with the sharp shaving head.

Small parts can be highly dangerous if swallowed. Therefore, keep the hair trimmer and accessories out of the reach of infants.

#### ○ **ELECTRICAL HAZARDS**

Clean the shaving head by rinsing it off under the tap water. However, the hair trimmer itself must not be immersed in water. The power cord and the adapter must not come into contact with water or other liquids, there is a risk of electric shock. Therefore, never use the hair trimmer over a filled sink or having a bath.

If The trimmer or charging station should fall into the water, immediately pull the adapter out of the socket.

Unplug the trimmer if you do not plan to use it for longer period of time, if the trimmer malfunctions during use, during thunderstorms and when cleaning.

Do not use if trimmer, power cord or adapter show any signs of damage.

Do not attempt to open the appliance. Only have repairs made to the trimmer, the power cord or adapter by an authorised dealer. Improper repairs may expose the user to considerable hazards.

Only use the adapter supplied with the trimmer or an adapter with the same technical feature, otherwise the appliance could be damaged.

Only plug the adapter into a properly installed 220V~50Hz socket.

Never expose the trimmer to temperatures below -10°C or higher than +40°C for longer periods of time.

The appliance includes a double rechargeable battery pack. It must not be dis-mantled, exposed to an open flame or short-circuited.

Do not operate the appliance if the attachment is damaged.

The shaving head is very sharp. Be very careful when you use the appliance without the attachment.

### **DISPOSAL**

Dispose the packaging in proper manner. If you wish to dispose the appliance, turn out the screws

and remove the double rechargeable battery pack. Afterwards, the appliance is destroyed. Special containers are provided for disposing of rechargeable batteries at shops selling them or public collection points. The other parts of the appliance can be disposed of according to current regulations. Details are available from your local authority.

#### ○ DISPOSAL OF THE BATTERY

1. The battery used in this shaver contains material that will pollute the environment. If you need to dispose the shaver, please dismantle the battery and turn it into the government designated collection places.
2. Before dismantling the battery with a tool, you must cut the power to the appliance. Ensure that the battery has no remaining electricity. If there is remaining electricity, turn on the shaver until the motor stops.
3. You can also dismantle the battery out of the shaver yourself. It's easy. Loosen rear cover with screw driver and dismantle the battery with electric iron.

After dismantling the battery, don't connect the shaver and its charging plug to the AC outlet.

