

INSTRUCTIONS

WILDRANGER MEN'S WATCH

PACKAGE CONTENTS

- Watch
- Instruction manual

TECHNICAL SPECIFICATIONS

- Strap length: 26 cm
- Watch width: 56 mm
- Material: PU, ABS
- Battery: CR2025
- Waterproof rating: 5 ATM

COMPONENTS




1. Button D (start)
2. Button C (reset)
3. Button B (mode)
4. Button A (light)

HOW TO USE

FUNCTIONS AND MODES

- The watch has several different functions and modes of operation: Time (1), date (2), alarm (3), time 2 (4), stopwatch (5).
- Press the button B (3) to cycle through these modes.

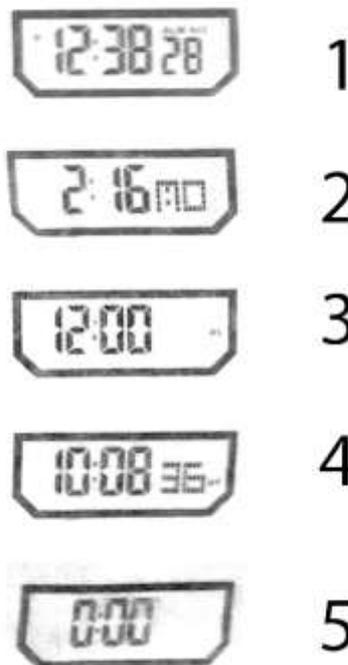

TIME

- Press and hold the button C for 2 seconds when on the Time menu to set the time.
- The seconds will start flashing. Press the button B to set them to 00.
- Press the button C to switch between seconds, hours and minutes. Use the button B to set the correct time. Holding the button B will let you change the time faster.
- Change the mode from 12 to 24 H at the end of the menu.
- When you are done setting the time, press the button C to continue.

DATE

- Press and hold the button C for 2 seconds when on the Date menu to set the date.
- Set the flashing item using the button B.
- Use the button C to continue and save the date at the end of the process.

ALARM

- Press and hold the button C for 2 seconds when on the alarm menu to set the alarm.
- Use the button B to set the flashing item.
- Alarm modes: SIG – short signal, ALM – alarm.
- The alarm will beep for 20 seconds when it reaches the selected time.

TIME 2

- Setting this time 2 is the same as setting time normally. The purpose of this tab is to

have two different time zones saved in the watch.

○ STOPWATCH

- Press the button C to start or stop the stopwatch.
- Press and hold the button C to reset the stopwatch.

○ SETTING THE TIME (ANALOG)

- Use the button D to set the analog clock. Pressing the button once will advance the time by one minute. Press and hold the button D to advance the time quickly. Press the button D again to stop the quick mode.

○ LIGHT

- Use the button A to turn on the light.
- The light will shine for 3 seconds after pressing the button.

in the bottom right corner. The product has a lifetime of 24 months from the date of collection.



	WEEE disposal and recycling symbol. The WEEE symbol is attached to the product in compliance with the EU directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). It is intended to deter the improper disposal of this product and to promote reuse and recycling.
---	--

WARNINGS

- Do not disassemble or modify in any way.
- When the battery runs out, take the watch to a designated repair shop for battery replacement.

WARRANTY

The warranty is valid for 24 months. You can claim it from DFVU d.o.o., Liparjeva 6a, 1234 Mengeš, Slovenia, for a replacement product or a refund. Send us your order number and purchase date in the email, which is available by clicking on our logo