

INSTRUCTIONS

MASTERCRAFTER WOOD CHISEL

PACKAGE CONTENTS

- Chisel
- Wrench
- Flexible shaft
- 5 attachments

TECHNICAL SPECIFICATIONS

- Size: 28 × 160 mm
- Material: Steel, ABS



HOW TO USE

- The wood chisel connects to your electric drill (not included) to work.
- Insert one end of the shaft into the chisel connector.
- Unscrew the bolt on the chisel and insert one of the attachments into the slot. Use the included wrench to fasten the bolt to secure the attachment.
- Attach the other end of the shaft to the electric drill just like you would any other drilling attachment. For more information consult your electric drill's user manual.

WARNINGS

- Only use the product for its intended purpose.
- Do not disassemble or modify in any way.
- Keep away from heat and moisture.
- Not suitable for children younger than 3 years. Contains small parts.
- Make sure to only use the tool in a well-lit and secure environment.
- Use protective equipment such as gloves and eye protection.

WARRANTY

The warranty is valid for 24 months. You can claim it from DFVU d.o.o., Liparjeva 6a, 1234 Mengeš, Slovenia, for a replacement product or a refund.

Send us your order number and purchase date in the email, which is available by clicking on our logo in the bottom right corner. The product has a lifetime of 24 months from the date of collection.

