

INSTRUCTION MANUAL

PROFESSIONAL HAIR TRIMMER ORNATEPRO

PACKAGE CONTENTS

- Hair trimmer
- Maintenance oil
- Cleaning brush
- 4 × guide comb (1.5 mm, 3 mm, 6 mm, 9 mm)
- USB charging cable
- Instruction manual

TECHNICAL SPECIFICATIONS

- Power supply: Li-ion Rechargeable battery
- Charging: USB cable
- Input: 5 V $\approx$ 1 A
- Charging time: 2.5 h
- Working time: 5 h
- Blade material: stainless steel
- Size: 13.5 × 3.3 cm



COMPONENTS




- (1) Hair trimmer
- (2) 1.5 mm guide comb
- (3) 3 mm guide comb
- (4) 6 mm guide comb
- (5) 9 mm guide comb
- (6) Maintenance oil
- (7) Cleaning brush
- (8) USB charging cable
- (9) On/off button

CHARGING

- Insert the USB cable into the charging port at the bottom of the device and the other end of the cable into a power adapter to charge it.
- During charging, a red light at the bottom of the device turns on.
- Before first use, fully charge the battery.
- The standard charging time is 2.5 h. Do not charge the battery for a longer period to avoid damage.
- A fully charged device can be used for 300 min.
- The device can be used while it is charging.

HOW TO USE

- To turn the hair trimmer on or off, press the on/off button (9).
- A green light at the bottom of the device turns on during use.
- To use the included guide comb(s), set it on the blade and gently press it down until it clicks into place.
- To take the guide comb off, push the clip upwards.

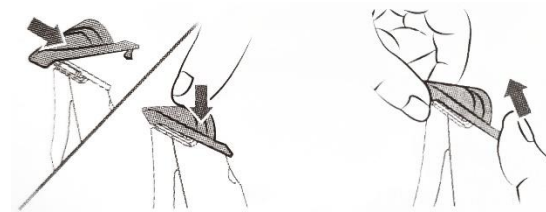

CLEANING, STORAGE AND MAINTENANCE

- After each use, clean the blade and the combs with the included brush. Use the included maintenance oil to lubricate the blade.
- Use a soft damp cloth to clean the casing of the trimmer. Do not submerge in water!
- You can use running water only to clean the blade and the guide combs.
- When not in use, store the trimmer in the provided box in a dry place and away from children.
- Make sure to charge the device at least once a year when not in use for longer periods.

WARNINGS

- Do not use the device in the bath or shower.
- Store out of children's reach.
- This device is not intended for use by persons with reduced physical, sensory, or mental abilities, unless they have been given proper training under the supervision of a person responsible for their safety.
- This device has no user serviceable parts. Do not disassemble.
- Use this product only for its intended purpose. Do not use attachments of any kind.
- Turn off when not in use.

- The trimmer may become warm during operation or while charging. This is normal.
- Make sure that the device is turned off while changing the guide combs.

WARRANTY

The warranty is valid for 24 months. You can claim it from DFCU d.o.o., Liparjeva 6a, 1234 Mengeš, Slovenia, for a replacement product or a refund. Send us your order number and purchase date in the email, which is available by clicking on our logo in the bottom right corner. The product has a lifetime of 24 months from the date of collection.



	WEEE disposal and recycling symbol. The WEEE symbol is attached to the product in compliance with the EU directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). It is intended to deter the improper disposal of this product and to promote reuse and recycling.
--	---