

INSTRUCTION MANUAL


ZAPPO ELECTRIC INSECT SWATTER

PACKAGE CONTENTS


- Insect swatter
- Swatter stand
- USB charging cable
- Instruction manual

TECHNICAL SPECIFICATIONS

- Power supply: Rechargeable 1200 mAh battery
- Lamp type: LED
- USB rated input: 5V = 500 mA
- Rated power: 5 W
- Output voltage: 2700 V
- Material: ABS
- Size: 49.6 × 18.5 × 3.4 cm

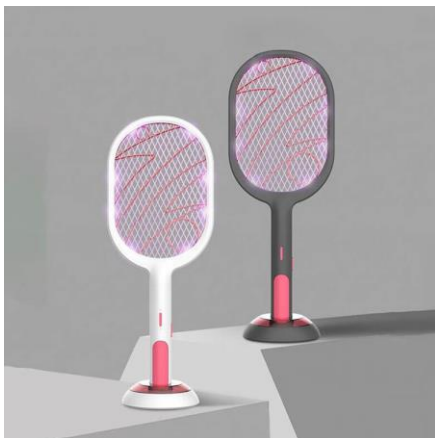

COMPONENTS

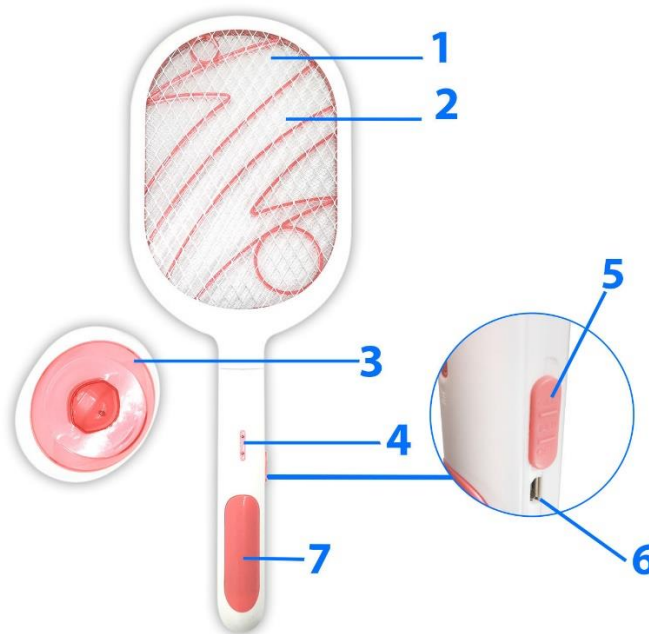

- (1) Electrical wire mesh
- (2) Protective wire mesh
- (3) Swatter stand
- (4) Indicator light
- (5) Intensity/off switch
- (6) MicroUSB charging port
- (7) Zapper button

CHARGING

- Use the included microUSB cable to charge the device.
- Plug one end of the cable into the device (6) and the other end into a charger or your computer's USB port.

- The lower of the two indicator lights (4) indicates that the device is charging.
- Do not charge for more than 12 hours at a time.
- When the device's battery is depleted, charge it immediately.
- Charge for 4–8 hours before first use.

HOW TO USE

- The electric insect swatter has three modes: Swatter mode, night lamp mode, mosquito trap mode.
- **SWATTER MODE:**
 1. Turn on the swatter by sliding the intensity/off switch (5) to NO1.
 2. The LED light will light up.
 3. Press the zapper button (7) to shock insects. The shock indicator light (upper 4) will shine when you press the button.
 4. Slide the switch (5) to NO2 for a more intense shock.
- **NIGHT LAMP MODE:**
 1. Place the swatter into its stand and plug in the USB cable.
 2. Slide the intensity/off switch into the NO1 position.
 3. LED lights will softly illuminate the rim of the swatter, and the device will be charging.
 4. Disconnect the device and press the zapper button to use the swatter.
- **MOSQUITO TRAP MODE:**

1. Place the swatter into the stand and plug in the USB cable.
2. Slide the intensity switch to NO2.
3. Both indicator lights will shine which indicates that the swatter is in mosquito trap mode.
4. The soft LED lights will attract mosquitos and the swatter will automatically shock them when they get near the wire mesh.

- Use in humid climates might reduce effectiveness.
- This device is not a toy. Keep away from children.
- This appliance has no user serviceable components. Do not disassemble.
- Turn off when not in use.
- Do not use as a racket.

CLEANING, STORAGE AND MAINTENANCE

- The wire mesh can get dirty after prolonged use. Clean the electrical wire mesh by using a soft brush. Make sure that the device is turned off while you clean it.
- Do not use water for cleaning the device.
- Turn off the device while not in use.
- Do not charge for more than 12 hours at one time to ensure a long lifespan.
- The device should only be used for its intended purpose.
- For indoor use only.

WARNINGS

- Do not submerge under any circumstance. High chance of electrical shock.
- Do not touch the electrical wire mesh under any circumstance.
- Keep away from flammable or explosive materials.

WARRANTY

The warranty is valid for 24 months. You can claim it from DFCU d.o.o., Liparjeva 6a, 1234 Mengeš, Slovenia, for a replacement product or a refund. Send us your order number and purchase date in the email, which is available by clicking on our logo in the bottom right corner. The product has a lifetime of 24 months from the date of collection.



WEEE disposal and recycling symbol. The WEEE symbol is attached to the product in compliance with the EU directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). It is intended to deter the improper disposal of this product and to promote reuse and recycling.